


Images from fsdcinc.com



Make sure gun is unloaded and not cocked.
Open Lock.
Move release level (trigger) back down into a locked position.
Insert front unit into back unit through the trigger.
Make certain that lock is tight and cannot be moved.
Press units tighter together until lock does not move.

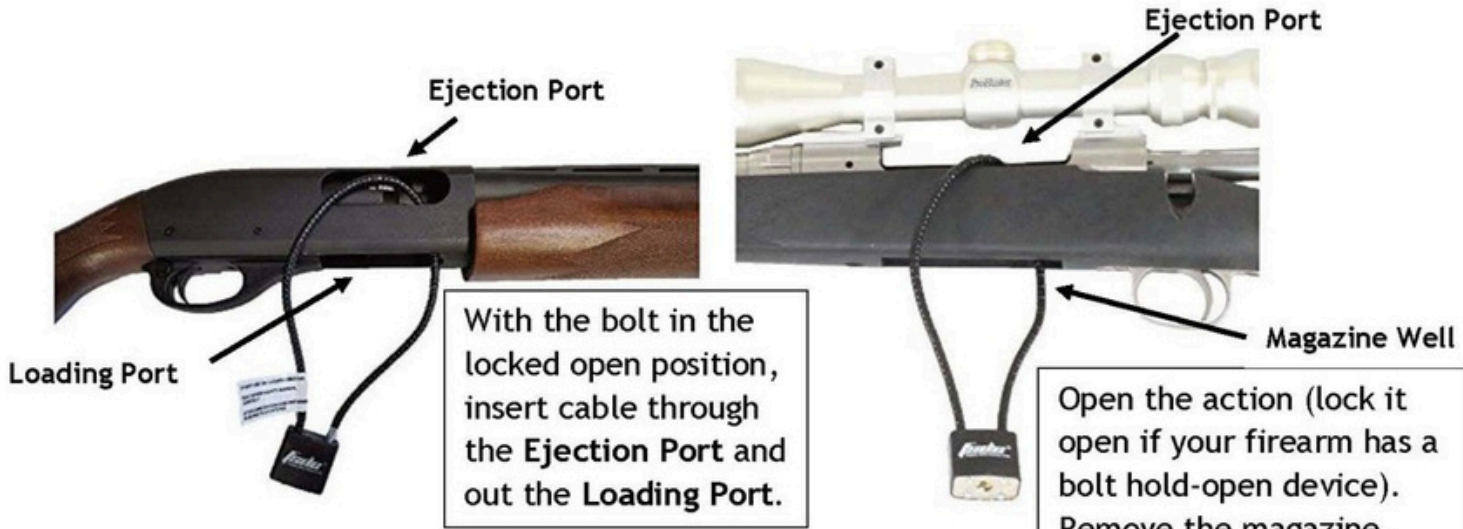

With the bolt in the locked open position, insert cable through the Ejection Port and out the Loading Port.

Open the action (lock it open if your firearm has a bolt hold-open device). Remove the magazine. Insert cable through the Ejection Port and out the Magazine Well.



With cylinder open, insert the cable through the barrel, or through an empty cylinder chamber.



With the slide locked back and magazine removed, insert the cable through the ejection port and out the magazine well.